


# Margo




## Margo types

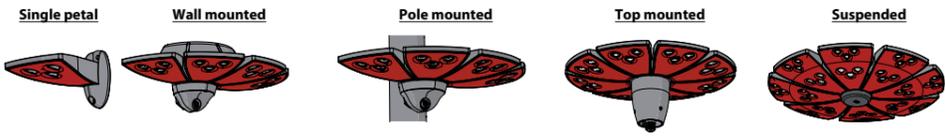


If the external cable, lighting source or driver contained in this light are damaged, they have to be replaced by the manufacturer or its maintenance agent or an equally qualified worker, in order to avoid any risk

### SINGLE PETAL MARGO

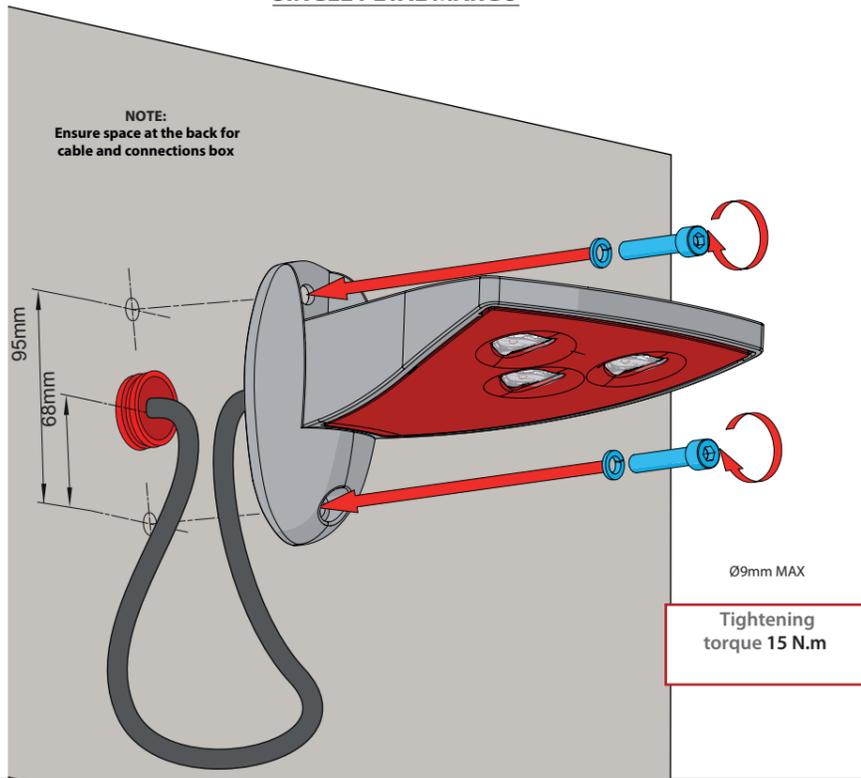


FIM0004L\_Margo

### WALL MOUNTED MARGO

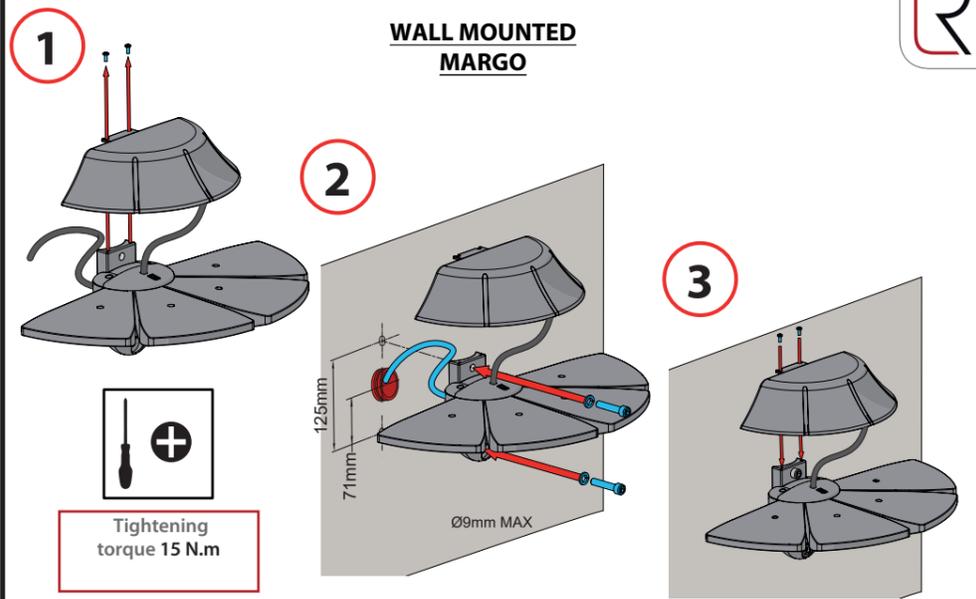


### POLE MOUNTED MARGO

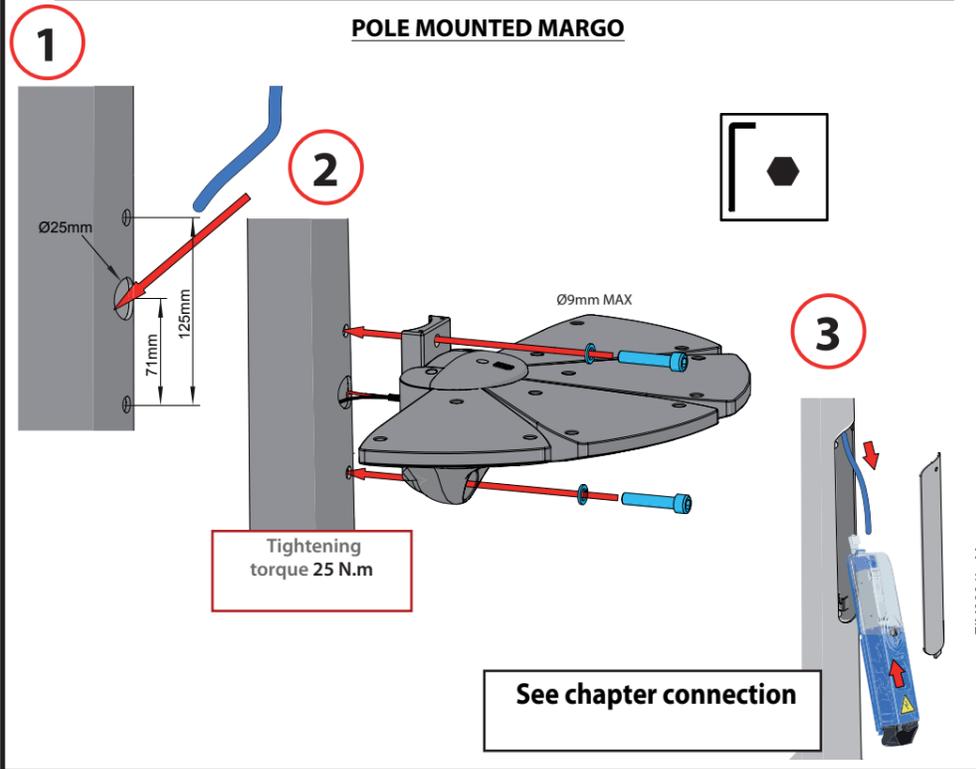


FIM0004L\_Margo

### TOP MOUNTED MARGO

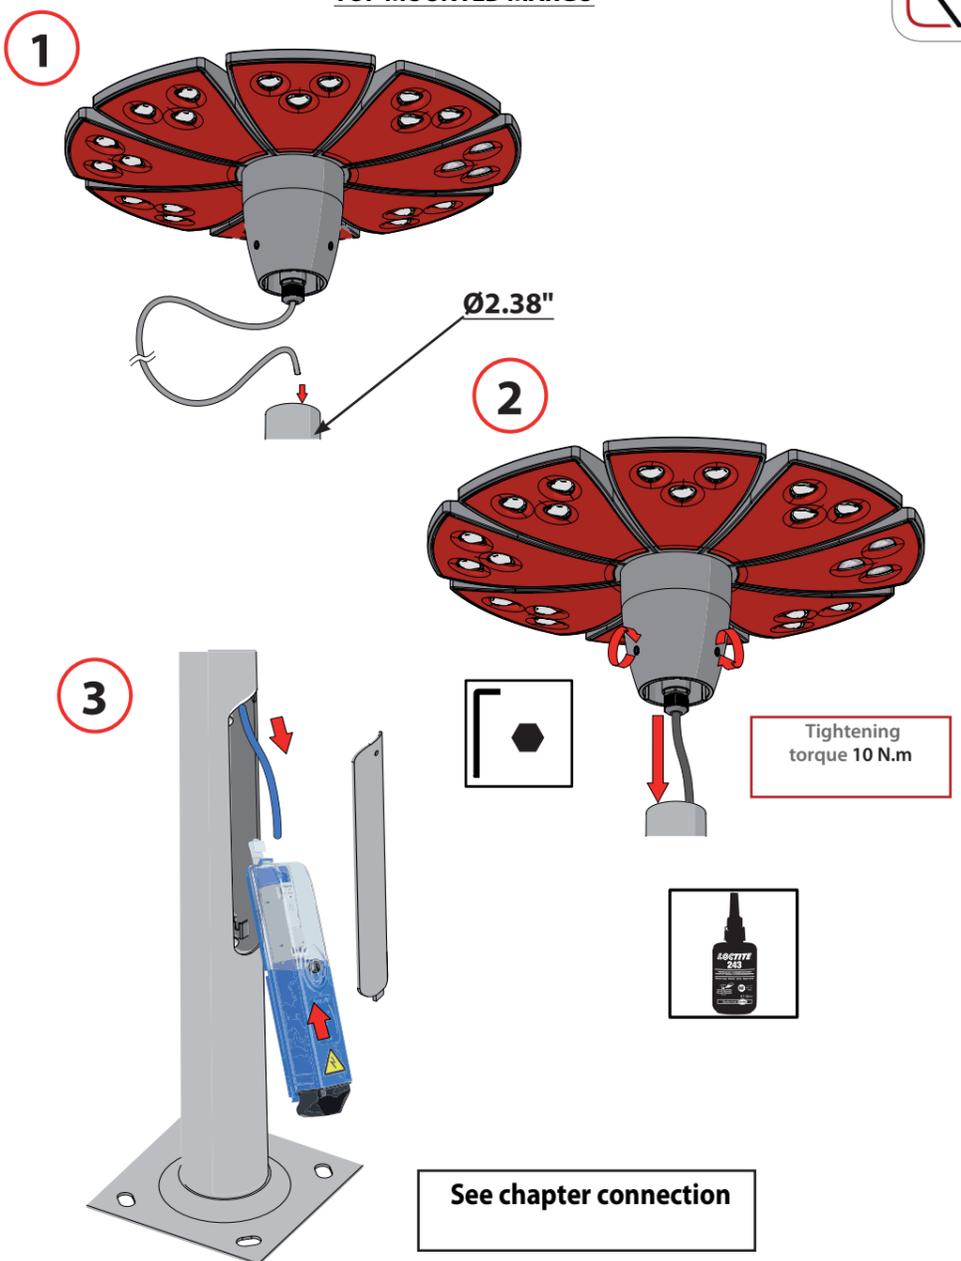

FIM0004L\_Margo

### SUSPENDED MARGO


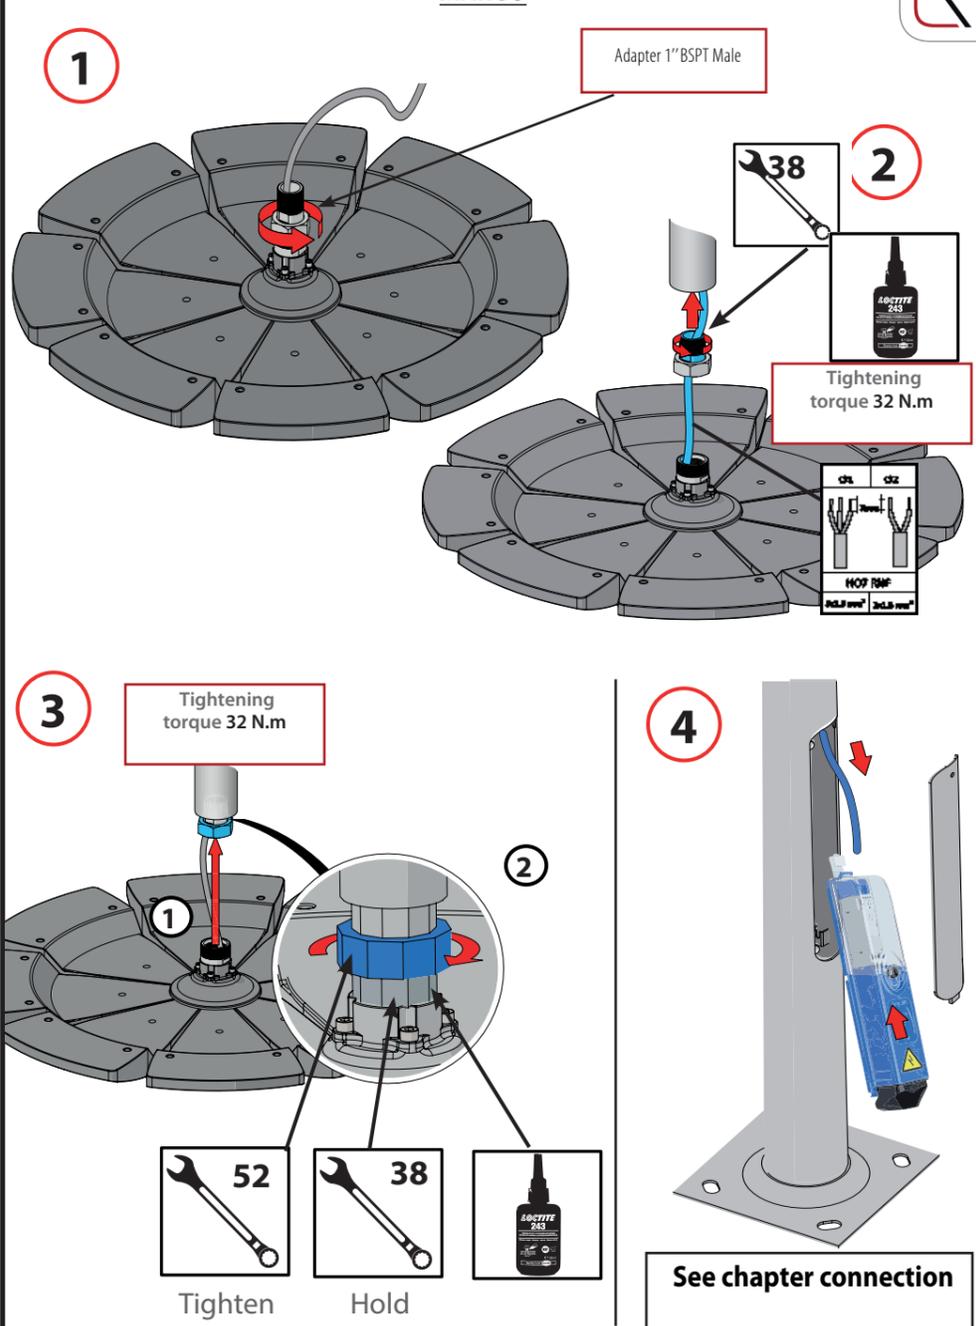


FIM0004L\_Margo

# Maintenance


## Margo Mini

1 a

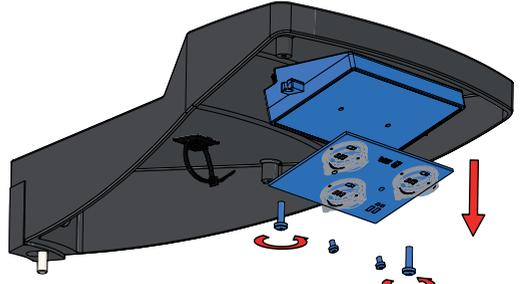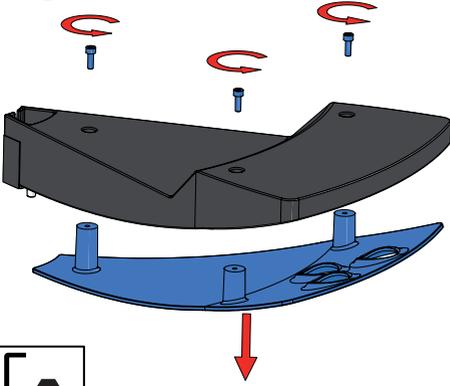

## Margo Mega

1 b

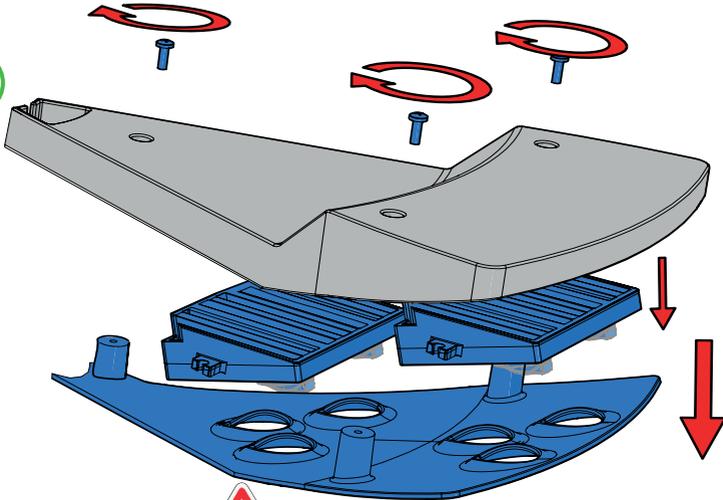


Hold with your hand when opening.

2



Put the system back by making all the previous operations in the reverse order.

# Cleaning


## Lens cleaning

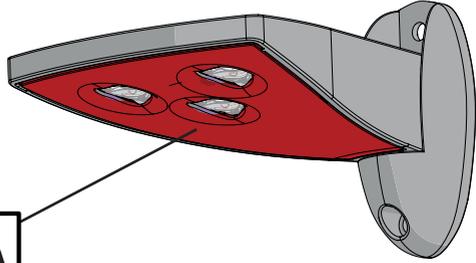

## Water drain cleaning

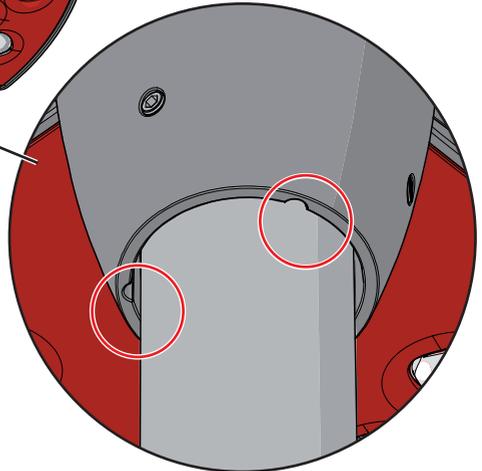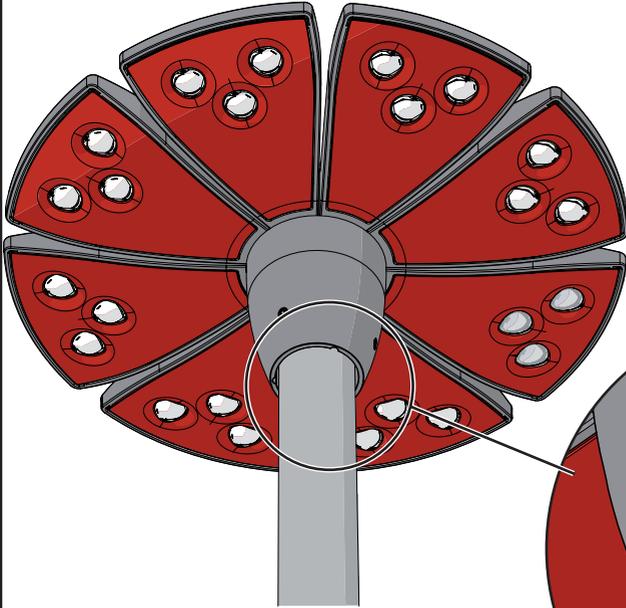

# CONNECTION

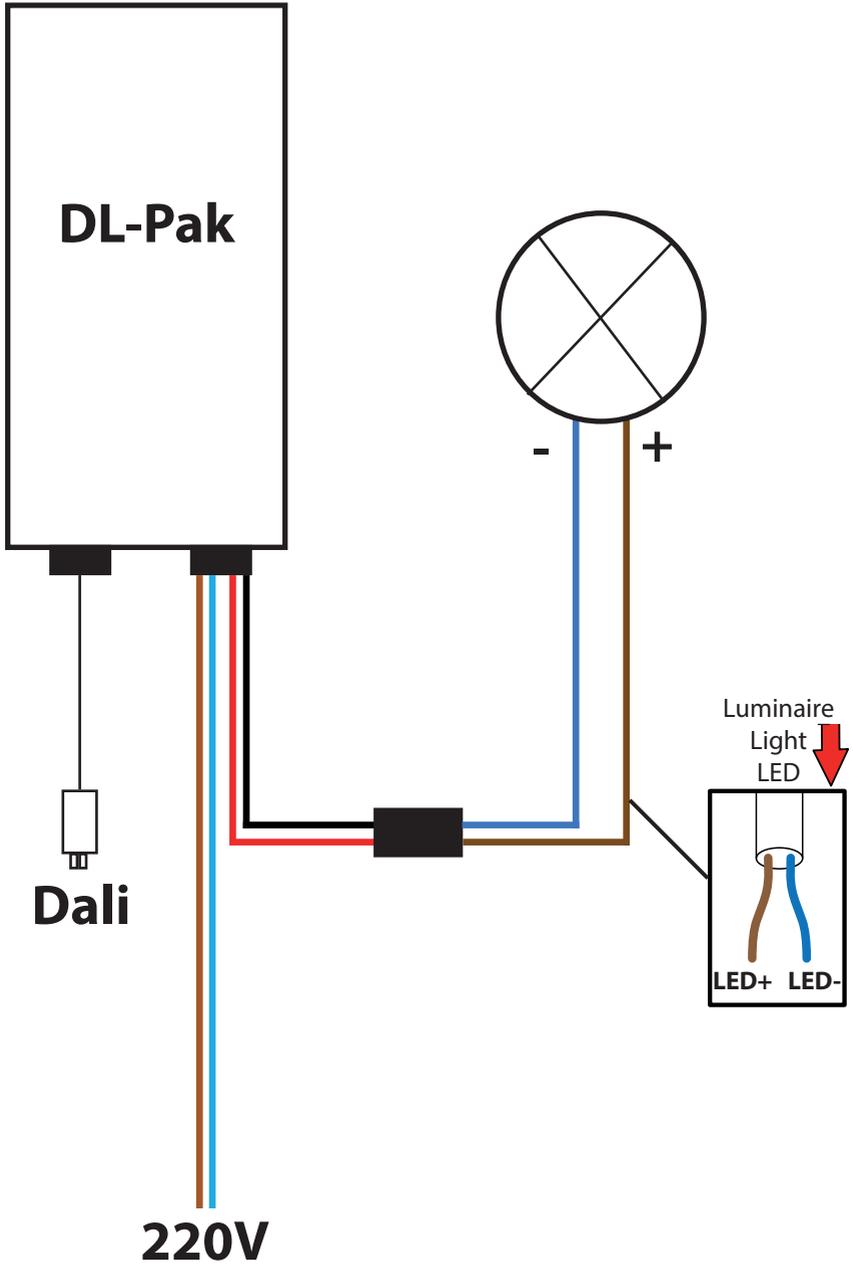


# TECHNICAL CHARACTERISTICS




## MARGO Top mounted

	MINI	MEGA
A (mm)	500	700
B (mm)	195	195

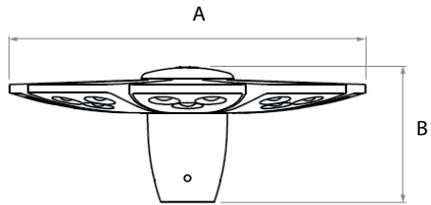

## MARGO Suspended

	MINI	MEGA
A (mm)	500	700
B (mm)	185	185

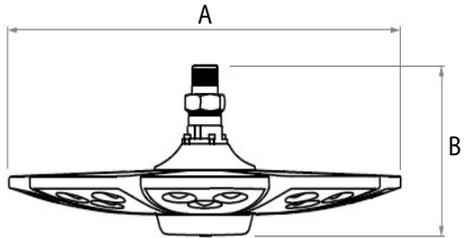

## MARGO Wall-mounted or against a pole

	MINI 1P	MINI 4P	MEGA 4P
A (mm)	164	500	700
B (mm)	125	152	152
C (mm)	27	54	54
D (mm)	95	125	125

