 



R-light



If the external cable, light source or driver contained in this light are damaged, they have to be exclusively replaced by the manufacturer, his maintenance agent or an equally qualified worker, in order to avoid any risk.


Installation

1

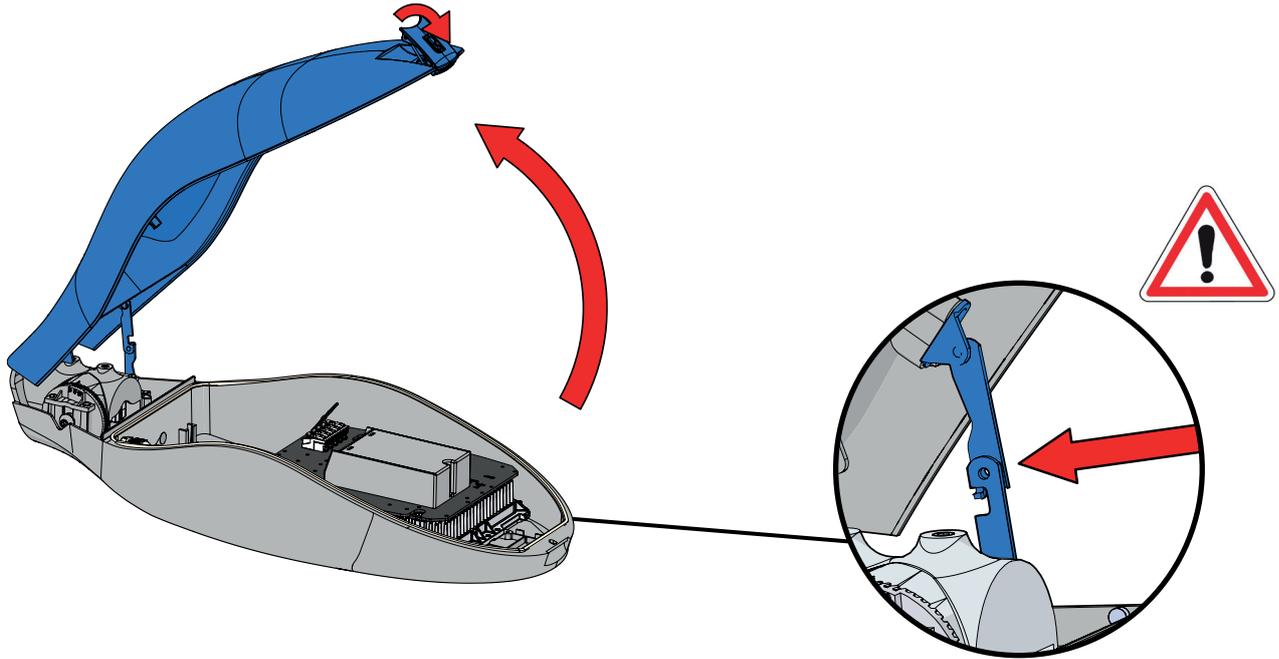

Lateral -> Top





2

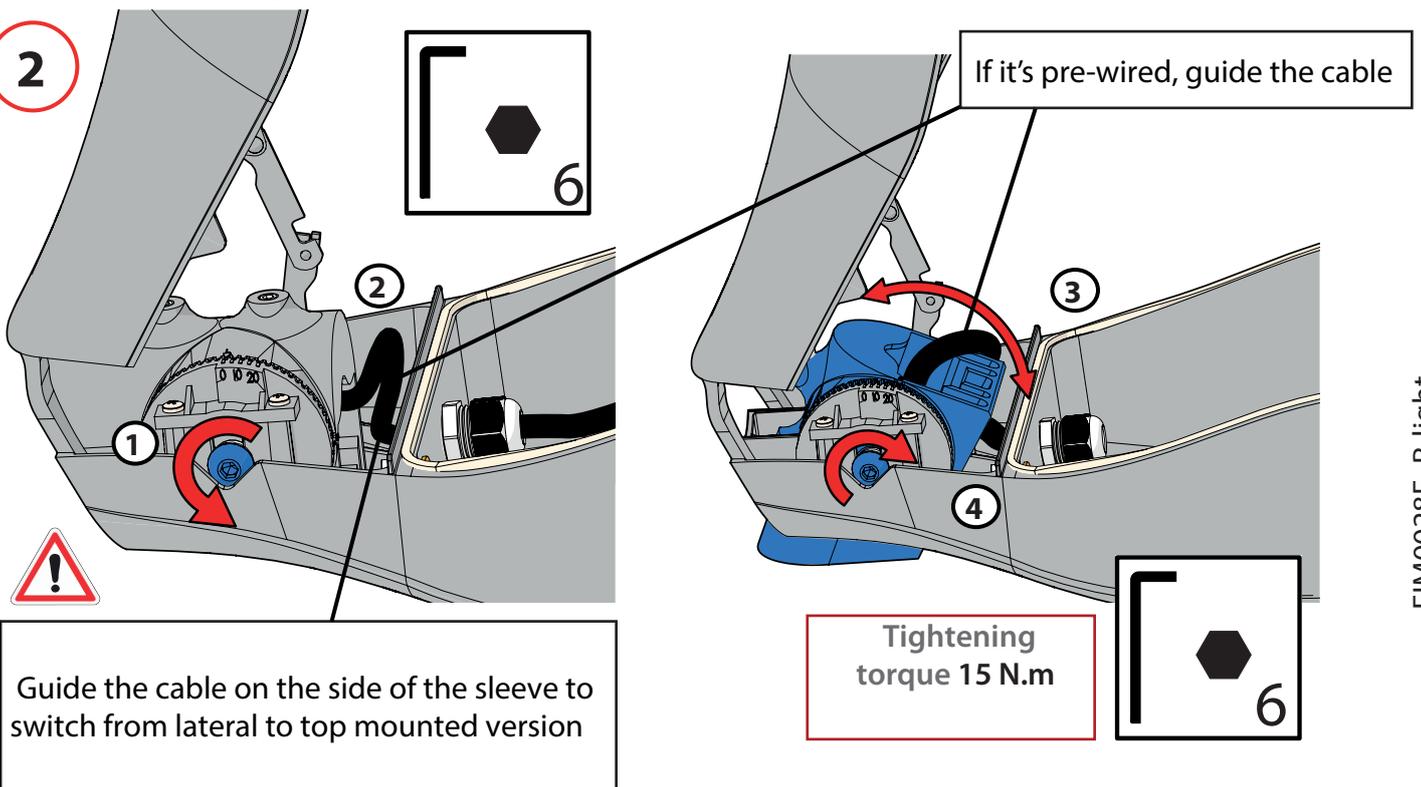

FIM0028F_R-light

Cabling



3

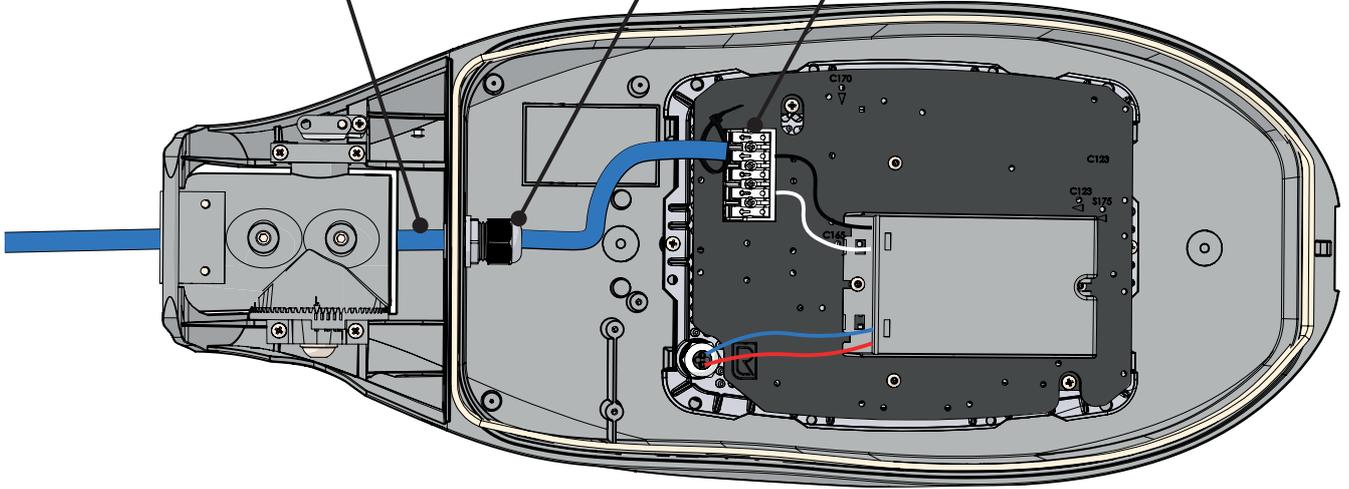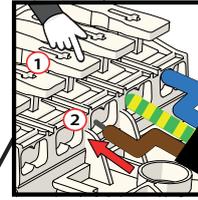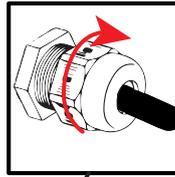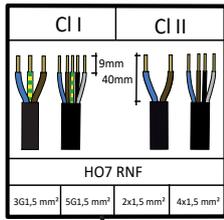

4

Put the system back by making all the previous operations in the reverse order.


5

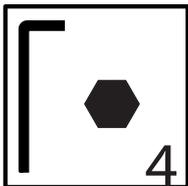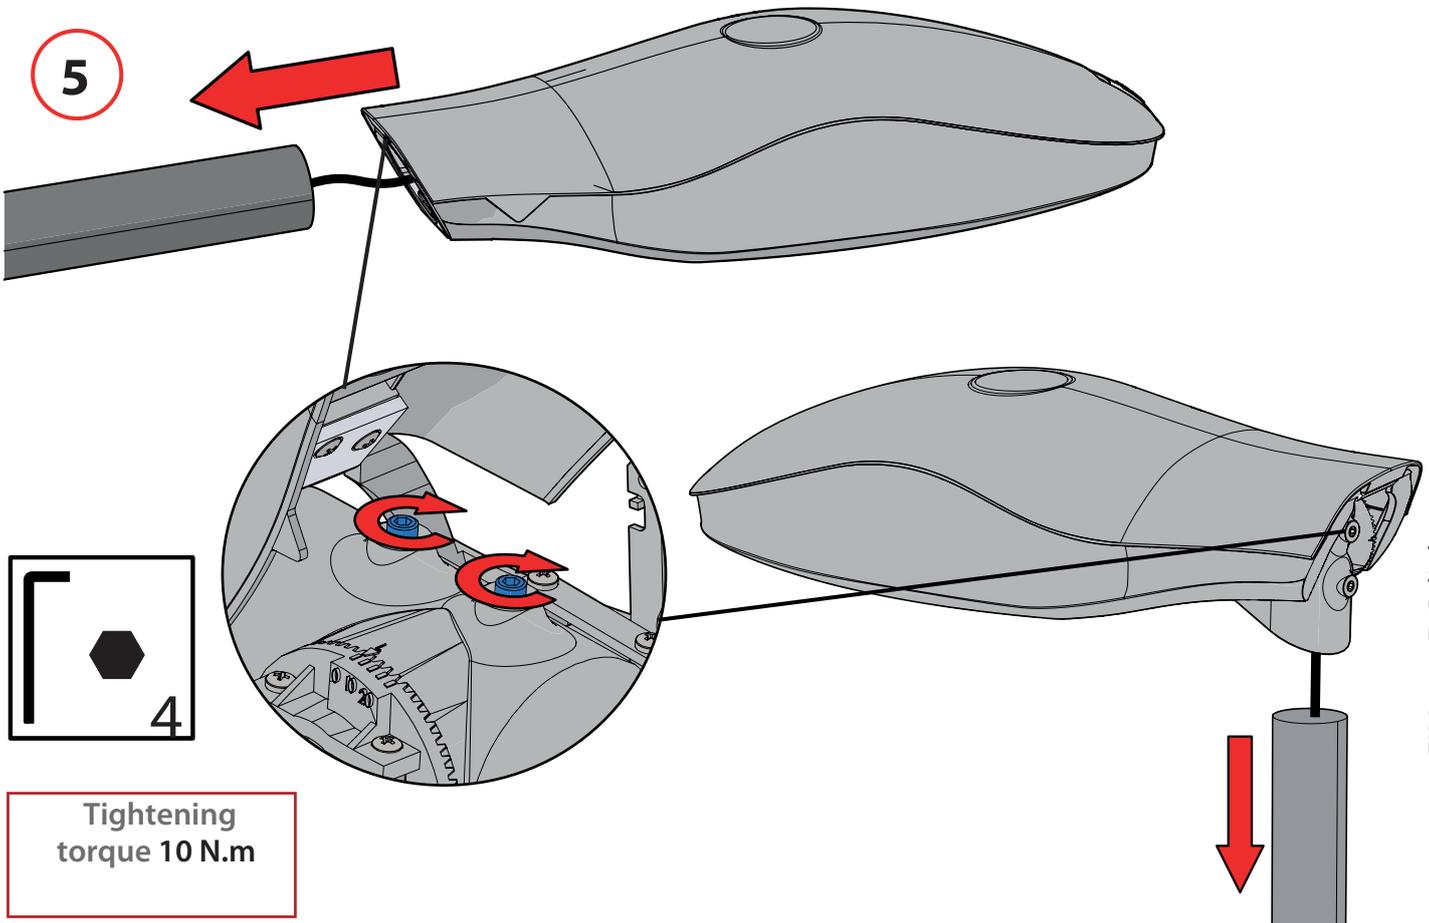



Tightening torque 10 N.m

Maintenance

1

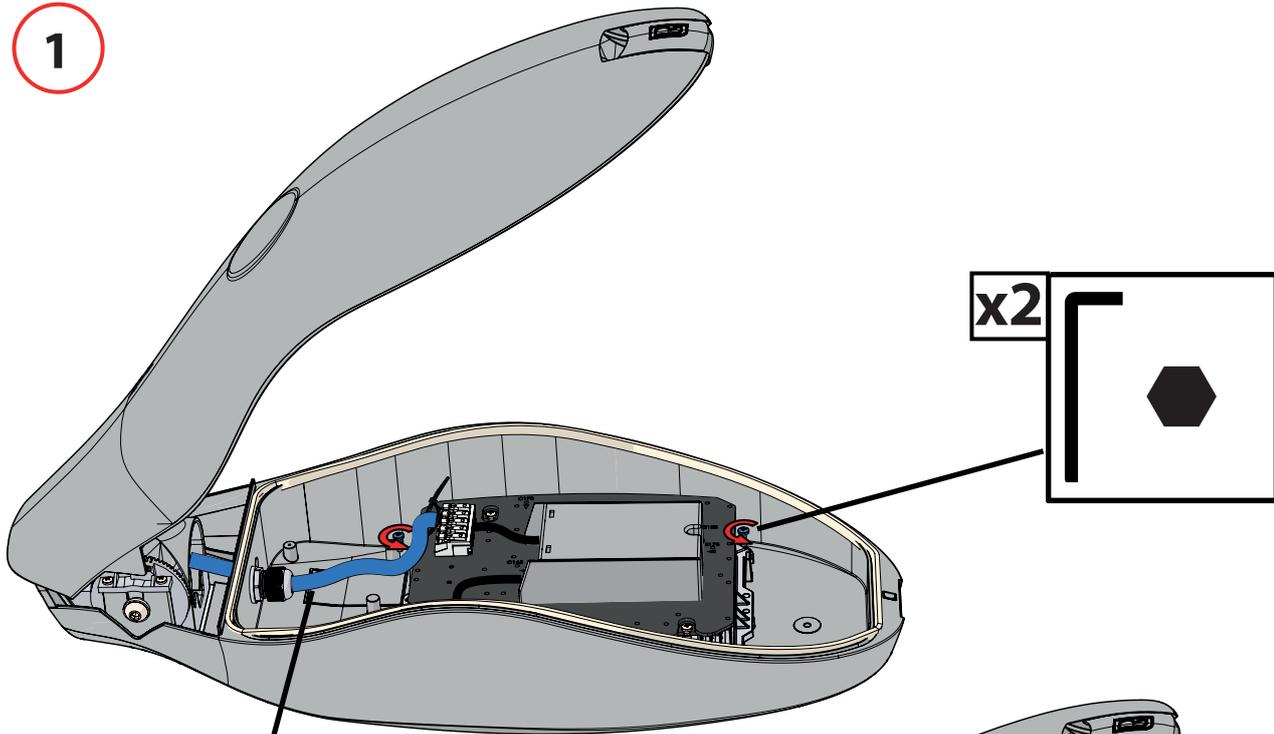

2

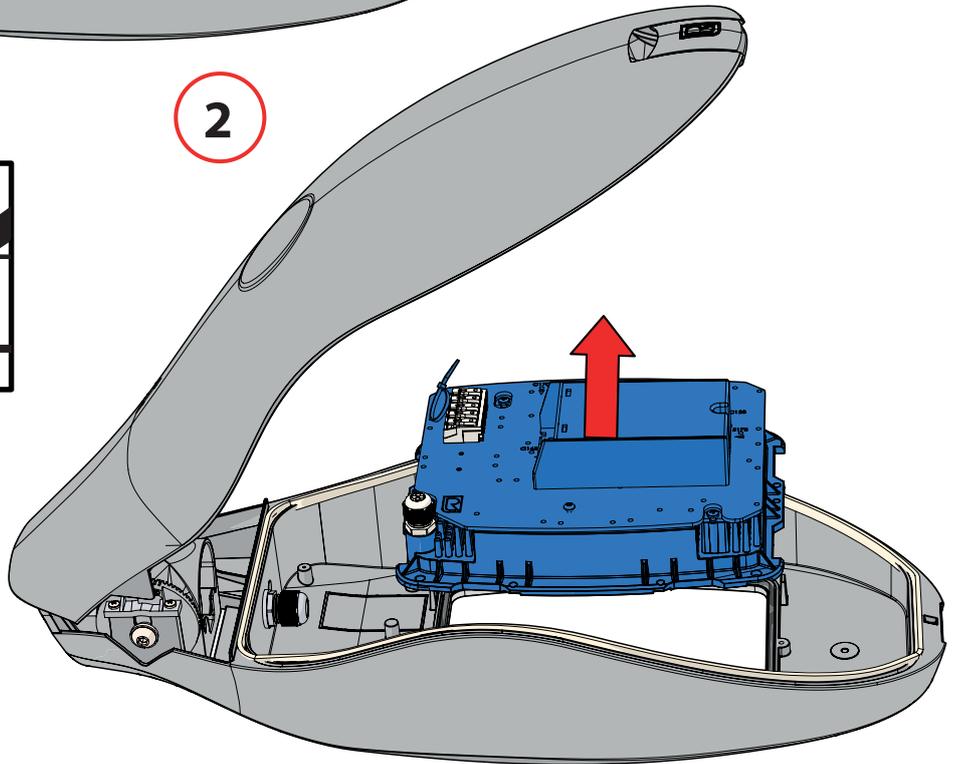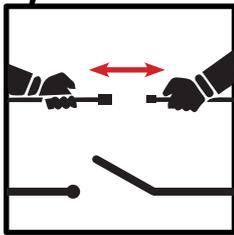

Cleaning

